


QUALITY STONE



QUICK INSTALL INSTRUCTIONS




ENSURE YOU HAVE ALL YOUR INSTALL AND SAFETY TOOLS READY

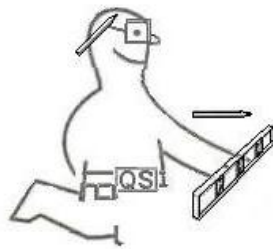


MAKE LEVEL LINE TO FOLLOW

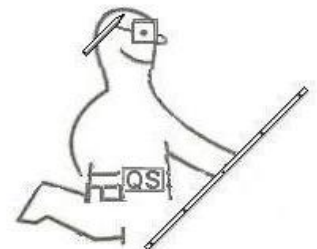

INSTALL STARTER STRIP

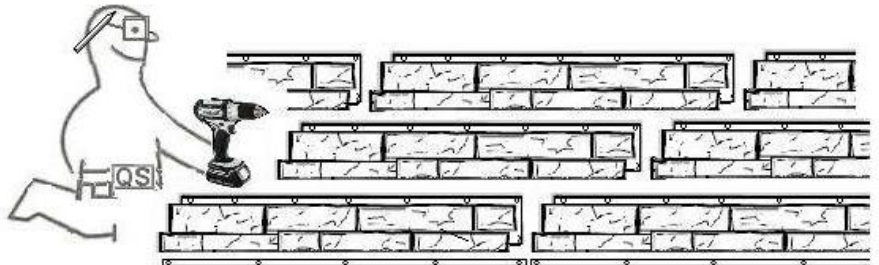


LOCK FIRST ROW OF PANELS ONTO STARTER STRIP, THEN SCREW 3-4 SCREWS IN THE TOP, AND 1-2 IN THE SIDE OF EACH PANEL

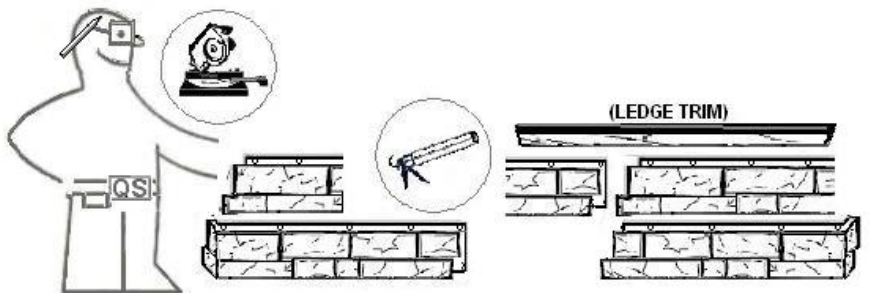

IF CORNER PANELS ARE BEING USED, YOU WILL LIKELY NEED TO CUT SOME PANELS AND FIT THEM BETWEEN TWO PANELS.

THERE MAY BE A NEED TO USE OUR STONE FINISH TO COVER SCREW HOLES (OR TO FILL ANY UNWANTED GAPS OR COVER EXPOSED POLY)

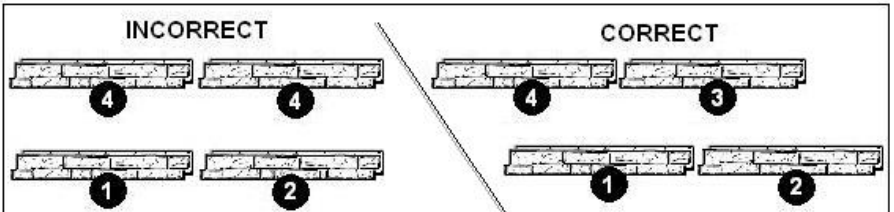

* MAKE SURE TO STAGGER VERTICAL JOINTS

* ALL PANELS ARE NUMBERED - MAKE SURE YOU DON'T REPEAT THE SAME NUMBER PANEL SIDE-BY-SIDE, OR ABOVE AND BELOW